

SEIBU KAIHATSU INC.,

取扱説明書

OPERATOR'S MANUAL

● 仕 様

Oエッジコネクター EDGE CONNECTOR

OLDER SIDE(半田面)	NO	NO	PARTS SIDE(部品面)
GND	Α	1	GND
GND	В	2	GND
+5V	С	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	Н	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER(-)	L	10	SPEAKER(+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	Р	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN IN 2	Т	16	COIN IN 1
2P START	U	17	1P START
2P UP	٧	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Υ	21	1P RIGHT
2P PUSH 1	Z	22	1P PUSH 1
2P PUSH 2	а	23	1P PUSH 2
	b	24	
	С	25	
	d	26	
GND	е	27	GND
GND	f	28	GND

OJAMMA規格 JAMMA STANDARD

〇夕テ画面 VERTICAL SCREEN

〇コントロールパネル CONTROL PANEL

8Way Joystick

PUSH 1

PUSH 2


A C

SHOT

вомв

(ショット)

(ボンバー)

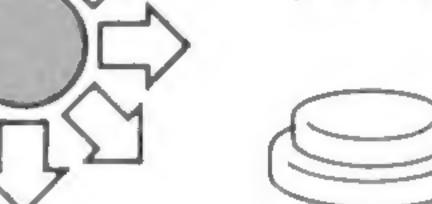



〇電源 POWER SOURCE

+5V5A

+12V ·····1A

(PARTS SIDE)

OVOL	
JAMMA	DIP 2
	DIP 1

雷電DX DIPSW表

DIP-SW 1		1	2	3	4	5	6	7	8
	1/1	OFF	OFF	OFF					
	1/2	ON	OFF	OFF					
COIN 1	1/3	OFF	ON	OFF					
(COIN CREDIT)	1/4	OFF	OFF	ON					
(CONVERDIT)	2/1	ON	ON	OFF					
	3/1	ON	OFF	ON		-			
	4/1	OFF	OFF ON OFF OFF OFF ON ON OFF ON OFF OFF OFF OFF OFF OFF OFF OFF ON OFF OFF ON ON ON ON						
COIN 2 (COIN/CREDIT)	1/1				OFF	OFF	OFF		
	1/2				ON	OFF	OFF		
	1/3				OFF	ON	OFF		
	1/4				OFF	OFF	ON		
	2/1				ON	ON	OFF		
	3/1				ON	OFF	ON		
	4/1			OFF OFF ON OFF OFF ON ON OFF OFF ON ON OFF OFF ON OFF OFF ON OFF OFF ON OFF OFF ON ON ON OFF OFF ON ON ON ON ON	ON				
	FREE PLAY	ON	ON	ON	ON	ON	OFF ON OFF ON ON ON ON ON ON ON ON		
STARTING COIN	NORMAL							OFF	
ゲーム開始時のクレジット	×2							ON	
SCREEN FLIP	NORMAL								OFF
画面反転	FLIP								ON
DEFAULT SETTION 出荷時の設定		OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

DIP-SW 2		1	2	3	4	5	6	7	8
	Normal	OFF	OFF						
DIFFICULTY	Easy 簡単	OFF	ON					OFF	
難易度	Hard 少し難しい	ON	OFF						
	Very Hard 難しい	ON	ON					ON	
	3			OFF	OFF				
NUMBER OF PLAYERS	4			OFF	ON				
プレイヤー数	2			ON	OFF				
	1			ON	ON		OFF		
DEMO SOUND	YES							OFF	
デモプレイ中のサウンド	NO							ON	
TEST MODE	GAME								OFF
テストモード	TEST							ON	ON
DEFAULT SETTI 出荷時の設定		OFF							

注意事項

- 1. PCボードの取り付け、取り外しは必ず電源を切ってから行って下さい。
- 2. 本ボードに張ってあるシリアルナンバーシールを剝がした場合や、無断で改造した場合には、故障に際して保障期間内であっても有償又は対象外となります。
- 3. 回路は一部バッテリーバックアップされており、テスターなどで導通検査などをするとショートの原因になりますので絶対に御止め下さい。また絶対にバッテリーは外さないで下さい。
- 4. PCボードを輸送する際には、スポンジやエアキャップなどで包み、段ボール箱 などに入れ強い衝撃を加えないようご注意下さい。

POINTS OF CAUTION

- 1. Always make sure the power is turned off before installing or removing a PC board.
- 2. If the serial number seal affixed to this board has been removed, or alteration without consent has been made, then in the case of malfunction, even within any warranty period, will result in loss of subjection to warranty or onus.
- 3. The circuits have been partly battery backed-up. Please desist from carrying out conductivity inspections with such tools as circuit testers as these can cause short circuits. And never remove the batteries.
- 4. When transporting PC boards, please wrap them in sponge rubber or bubble wrap and place them in cardboard boxes. Take care to prevent exposure to strong shocks or jolts.

SEIBU KAIHATSU INC., 有限会社 セイブ開発

〒101 東京都千代田区三崎町2-20-1

2-20-1 Misaki-Cho Chiyoda-Ku, Tokyo 101

TEL.03(3238)9169 FAX.03(3238)9187